

## **HTTP AT command of ESP8266**

- **AT**
- **AT+RST**
- **AT+CWMODE=1** – set the module operating mode to STA
- **AT+CWLAP** – check the available access points to connect to.
- **AT+CWJAP="ssid","password"** to connect to the access point.
- **AT+CIPMUX=1** – enable multiple connections.
- **AT+CIFSR** – check the module ip and connection status.
- **AT+CIPSTART=4,"TCP","www.google.com",80** – start the connection to google (you may occasionally get DNS fail, just retry the command)
- **AT+CIPSEND=4,42** -send 42 characters
- When you receive > from the module send the following data (replacing \r\n with CR and LF characters):
- **GET/HTTP/1.1\r\n**  
**Host: www.google.com\r\n\r\n\r\n**