

# RASPBERRY PI


## INSTALLATION GUIDE

# RASPBERRY PI INSTALLATION MANUAL

---

## REQUIRED ITEMS

- A Raspberry Pi (Either a [Model B](#) or [Model B+](#))

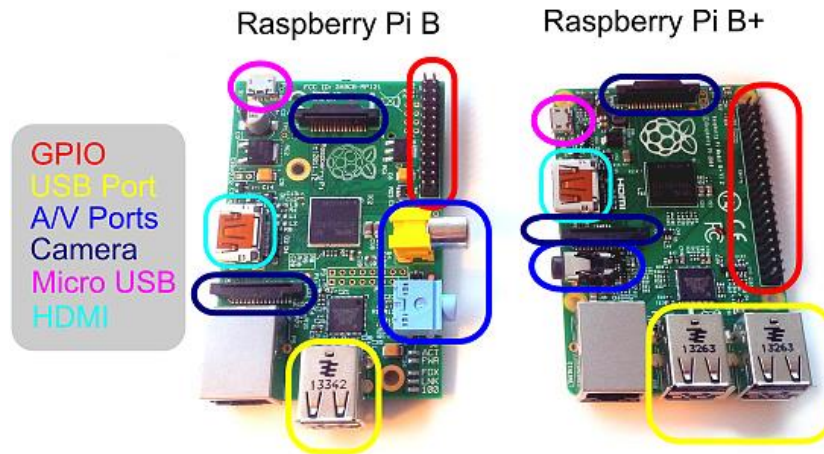

- SD Card
  - We recommend an 8GB class 4 SD card.
- Display and connecting cables
  - Any HDMI/DVI monitor or TV should work as a display for the Pi.
  - For best results, use one with HDMI input, but other connections are available for older devices.
- Keyboard and mouse
  - Any standard USB keyboard and mouse will work with your Raspberry Pi.
- Power supply
  - Use a [5V micro USB power supply](#) to power your Raspberry Pi. Be careful that whatever power supply you use outputs at least 5V; insufficient power will cause your Pi to behave unexpectedly.
- Internet connection
  - To update or download software, we recommend that you connect your Raspberry Pi to the internet either via an Ethernet cable or a WiFi adaptor.
- Sound
  - Headphones, earphones or speakers with a 3.5mm jack will work with your Raspberry Pi.

## RASPBERRY PI

### INSTALLING RASBIAN DEBIAN WHEEZY OPERATING SYSTEM USING WINDOWS


- [http://downloads.raspberrypi.org/raspbian\\_latest](http://downloads.raspberrypi.org/raspbian_latest)  
Download the file "RASPBIAN Debian Wheezy.zip" and extract the image file.
- Insert the SD card into your SD card reader(format the sd card) and check which drive letter was assigned. You can easily see the drive letter (for example G:) by looking in the left column of Windows Explorer. You can use the SD Card slot (if you have one) or a cheap SD adaptor in a USB port.
- Download the **Win32DiskImager** utility from the Sourceforge Project page (it is also a zip file); you can run this from a USB drive.  
<http://sourceforge.net/projects/win32diskimager/files/latest/download>
- Extract the executable from the zip file and run the **Win32DiskImager** utility; you may need to run the utility as administrator. Right-click on the file, and select Run as administrator.
- Select the image file you extracted above.
- Select the drive letter of the SD card in the device box. Be careful to select the correct drive; if you get the wrong one you can destroy your data on the computer's hard disk! If you are using an SD card slot in your computer and can't see the drive in the Win32DiskImager window, try using a cheap SD adaptor in a USB port.
- Click Write and wait for the write to complete.
- Exit the imager and eject the SD card

# RASPBERRY PI INSTALLATION MANUAL

---


## FORMAT THE SD CARD

Locate your SD card drive, in Windows Explorer, and secondary-click the mouse to bring up the context-sensitive menu. From the menu select **Format...** Ensure that the option **FAT32 (Default)** is selected and click **Start**.

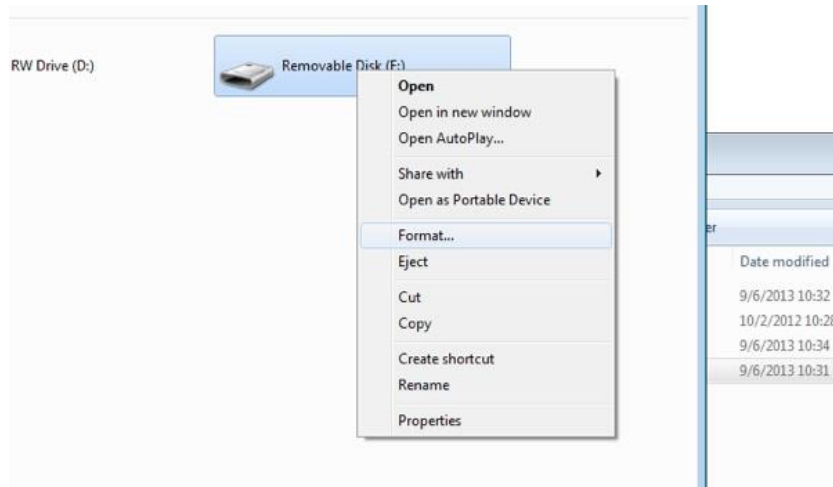

Selecting an SD card to format

A few moments later you will see a confirmation that the format has been completed and you SD card is now ready for the next stage.

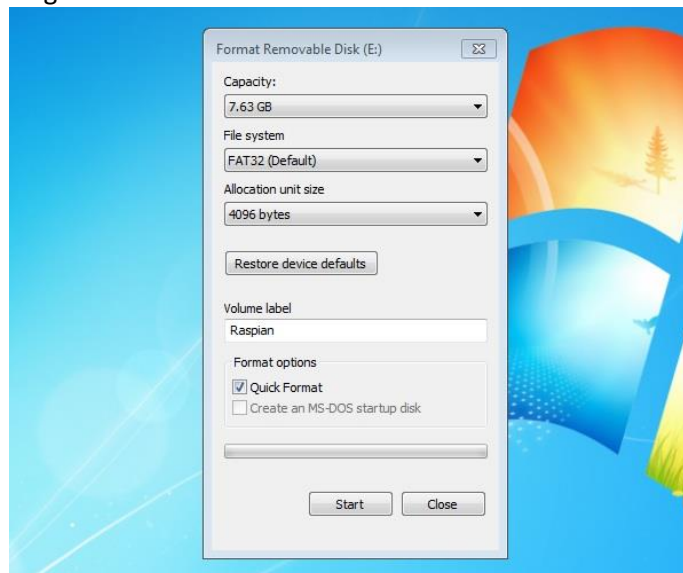


Formatting the SD card

# RASPBERRY PI INSTALLATION MANUAL


## USING WIN32DISKIMAGER

Having plugged in your SD card, (re)start Win32Diskimager. Choose the drive you want to copy the image to (in my case F:).


- **choose the drive with your SD card to write the OS image on**  
Then click on the folder icon and choose the unzipped .img file from earlier that you want to put on the SD card. Then click Write, to write the Operating system on the card from the .img file.

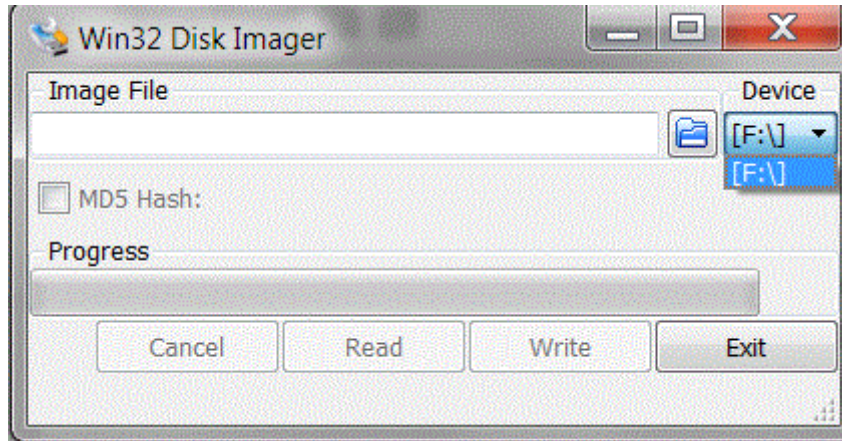

- **Write OS image from .img file to SD card**  
You will then be asked to confirm. Check carefully that you are writing to the correct device and if so, click Yes.

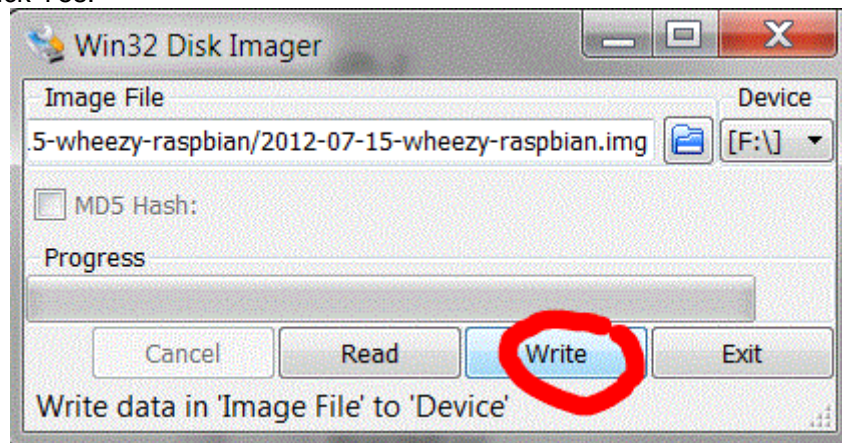

- **Check device and confirm**  
The progress bar will show you how far it's got.

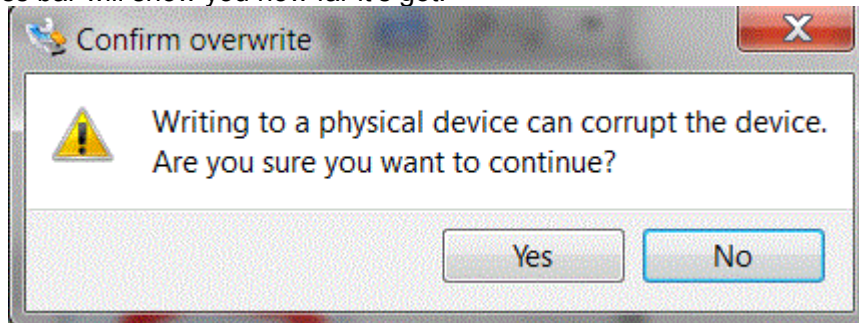




# RASPBERRY PI INSTALLATION MANUAL

---


- **Progress indicator**

When it's finished it looks like this.

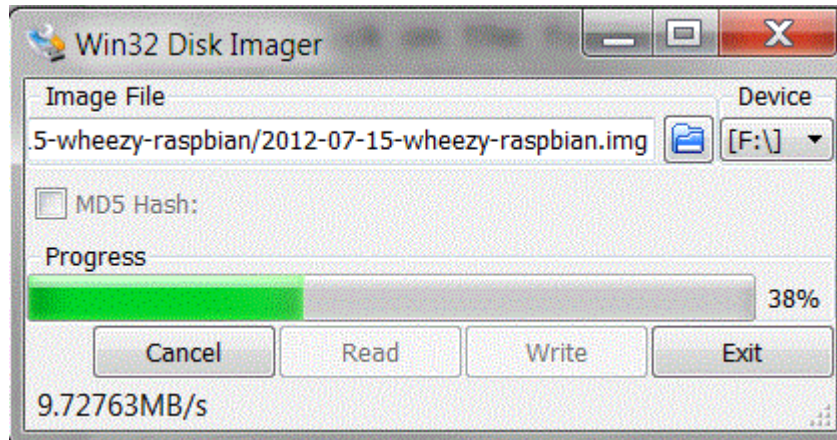

- **Finished**

Then you can eject the card reader and remove the SD card. Then you can try it out in your Raspberry Pi

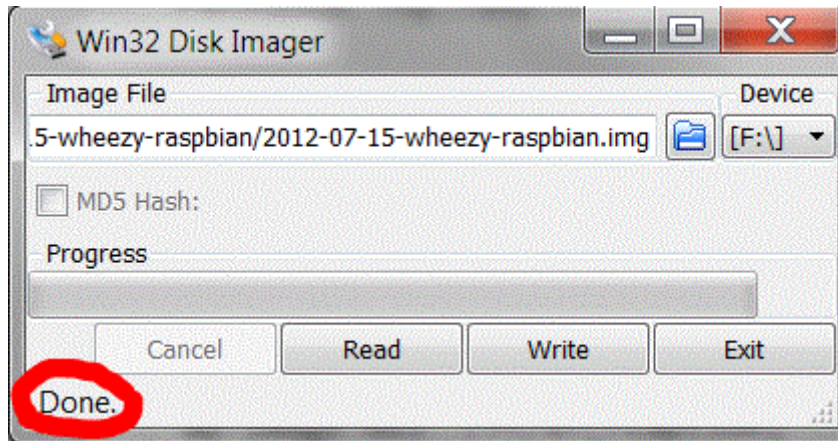

# RASPBERRY PI INSTALLATION MANUAL


---

## PLUGGING IN YOUR RASPBERRY PI

1. Begin by slotting your SD card into the SD card slot on the Raspberry Pi, which will only fit one way.
2. Next, plug in your USB keyboard and mouse into the USB slots on the Raspberry Pi. Make sure that your monitor or TV is turned on, and that you have selected the right input (e.g. HDMI 1, DVI, etc).
3. Then connect your HDMI cable from your Raspberry Pi to your monitor or TV.
4. If you intend to connect your Raspberry Pi to the internet, plug in an Ethernet cable into the Ethernet port next to the USB ports; if you do not need an internet connection, skip this step.
5. Finally, when you are happy that you have plugged in all the cables and SD card required, plug in the micro USB power supply. This action will turn on and boot your Raspberry Pi.
6. If this is the first time your Raspberry Pi SD card have been used, then you will have to select an operating system and configure it.

## LOGGING INTO YOUR RASPBERRY PI

1. Once your Raspberry Pi has completed the boot process, a login prompt will appear. The default login for Raspbian is username pi with the password raspberry. Note you will not see any writing appear when you type the password. This is a security feature in Linux.
2. After you have successfully logged in, you will see the command line prompt **pi@raspberrypi~\$**.
3. To load the graphical user interface, type **startx** and press **Enter** on your keyboard.

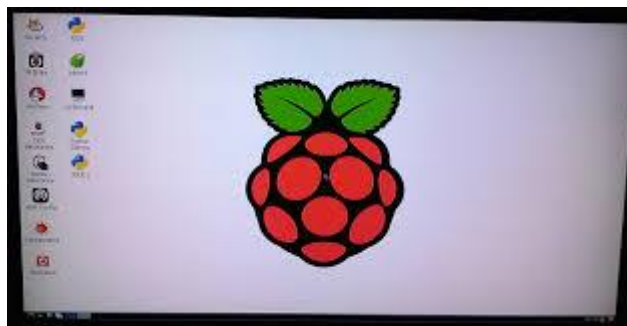

# RASPBERRY PI INSTALLATION MANUAL

---

## DOWNLOAD AND INSTALL WIRING PI

WiringPi is maintained under GIT for ease of change tracking, however there is a Plan B if you're unable to use GIT for whatever reasons (usually your firewall will be blocking you, so do check that first!)

### ONLINE INSTALL

If you do not have GIT installed, then under any of the Debian releases (e.g. Raspbian), you can install it with:

**sudo apt-get install git-core**

If you get any errors here, make sure your Pi is up to date with the latest versions of Raspbian:

**sudo apt-get update**

**sudo apt-get upgrade**

To obtain WiringPi using GIT:

**git clone git://git.drogon.net/wiringPi**

If you have already used the clone operation for the first time, then

**cd wiringPi**

**git pull origin**

Will fetch an updated version then you can re-run the build script below.

To build/install there is a new simplified script:

**cd wiringPi**

**./build**

The new build script will compile and install it all for you – it does use the sudo command at one point, so you may wish to inspect the script before running it.

### OFFLINE INSTALL

Click on this URL: (it should open in a new page)

**<https://git.drogon.net/?p=wiringPi;a=summary>**

Then look for the link marked snapshot at the right-hand side. You want to click on the top one.

This will download a tar.gz file with a name like wiringPi-98bcb20.tar.gz. Note that the numbers and letters after wiringPi (98bcb20 in this case) will probably be different – they're a unique identifier for each release.

You then need to do this to install:

**tar xzf wiringPi-98bcb20.tar.gz**

**cd wiringPi-98bcb20**

**./build**

Note that the actual filename will be different – you will have to check the name and adjust accordingly.



## TEST WIRINGPI'S INSTALLATION

run the gpio command to check the installation:

```
gpio -v
```

```
gpio readall
```

That should give you some confidence that it's working OK.

WiringPi is released under the GNU Lesser Public License version 3.

## TESTING SERIAL PORT IN RASPBERRY PI

A great way to test out the serial port is to use the minicom program. If you dont have this installed run

```
sudo apt-get install minicom
```

Connect your PC to the Raspberry Pi serial port using an appropriate serial port adapter and wiring, then open Putty or a similar serial terminal program on PC side. Setup a connection using the serial port at 9600 baud.

Now run up minicom on the Raspberry Pi using

```
minicom -b 9600 -o -D /dev/ttyAMA0
```

What you type into the minicom terminal screen should appear on the serial PC terminal and vice versa.